


Thank you for purchasing the IC-A210/IC-A210E VHF AIR BAND TRANSCEIVER with Icom's state of the art technology.

Please read this installation guide and the transceiver's instruction manual carefully before installing and operating.


## 1 IC-A210/IC-A210E SUPPLIED ACCESSORIES

The following accessories are supplied with the IC-A210/IC-A210E. Inspect the quantity of each part carefully.

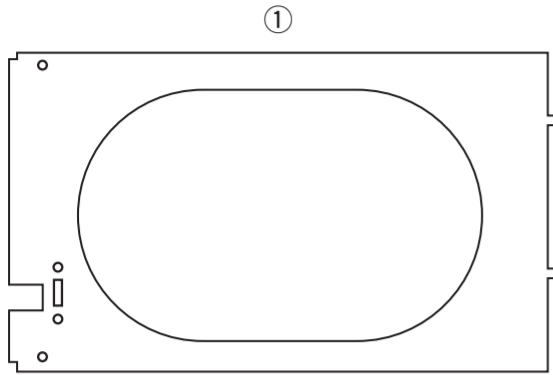

- ① Mounting bracket ..... 1
- ② Card edge connector (CR7E-30DB-3.96E) ..... 1
- ③ Screws Bind UNC (No. 4 × 12.7) ..... 2
- ④ BNC-LP ..... 1
- ⑤ Washer (Icom washer V) ..... 1
- ⑥ C-shaped ring ..... 1
- ⑦ Antenna cable clip ..... 1
- ⑧ Self crimping nut (No. 6) ..... 1
- ⑨ Nut (No. 6) ..... 1

Make sure you have received all accessories and that there is no shipping damage.

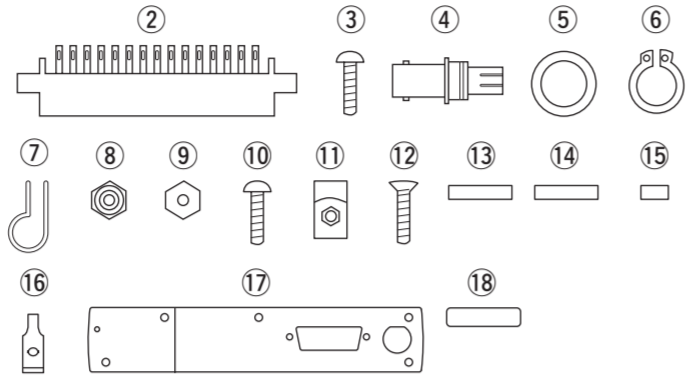

- ⑩ Screw (No. 6 × 12.7) ..... 1
  - ⑪ Crimp nuts (No. 6) ..... 6
  - ⑫ Screws (No. 6 × 12.7) ..... 6
  - ⑬ COMM1 sticker ..... 1
  - ⑭ COMM2 sticker ..... 1
  - ⑮ Polarizing key ..... 1
  - ⑯ Speed nut (No. 6) ..... 4
  - ⑰ MB-113\* ..... 1
  - ⑱ Voltage sticker (IC-A210E only) ..... 1
- \*Not supplied with some transceiver's versions.

## 2 IMPORTANT

**READ THIS, INSTALLATION GUIDE CAREFULLY** before attempting to install the IC-A210/IC-A210E in an aircraft. This sheet contains important safety instructions.

**NEVER** install the transceiver where normal navigation of the aircraft may be hindered.

**NEVER** install an antenna near any aircraft projection, engine, or propeller.

**INSTALL** a circuit breaker between the aircraft battery and the IC-A210/IC-A210E.

Check operation after installation.

Install the IC-A210/IC-A210E according to the following procedure.

The antenna should also be spaced at least 1m (3.3 feet) from any position occupied by any person on board of the aircraft.

**About e-marking:** Detailed installation notes for Icom mobile transceivers to be fitted into vehicles are available. Please contact your Icom dealer or distributor.

Icom, Icom Inc. and the Icom logo are registered trademarks of Icom Incorporated (Japan) in the United States, the United Kingdom, Germany, France, Spain, Russia and/or other countries.

## 3 INSTALLATION PROCEDURES

- ① Check the quantity of parts. Refer to **1 IC-A210/IC-A210E SUPPLIED ACCESSORIES**.
- ② Prepare miscellaneous items required for installation. Refer to Miscellaneous items in **4 PRECAUTIONS**.
- ③ Prepare required wiring. Refer to **6 CABLE CONNECTIONS, 7 CONNECTOR INFORMATION** and **8 CARD EDGE CONNECTOR ASSEMBLY**.
- ④ Assemble supplied mounting bracket and other parts. Refer to **10 MOUNTING BRACKET ASSEMBLY**.
- ⑤ Cut the mounting hole. Refer to **11 MARKING MOUNTING HOLES**.
- ⑥ Mount the IC-A210/IC-A210E into the mounting bracket. Refer to **12 MOUNTING TO THE BRACKET**.
- ⑦ Check the IC-A210/IC-A210E operation. Refer to **9 OPERATION CHECK**.

## 4 PRECAUTIONS

### ◇ Miscellaneous items

The following items are required for installation but are **NOT** supplied with the IC-A210/IC-A210E.

- ① VHF air band antenna for the communication band.
- ② Various cables.
- ③ Antenna cable with BNC connector (50 Ω).
- ④ Switches to be mounted on the aircraft yoke.
- ⑤ Headphones (500 Ω).
- ⑥ Low-impedance carbon or dynamic microphone.
- ⑦ Preamplifier for a dynamic microphone.

### ◇ Transceiver location

Select a location which can support the weight of the transceiver.

**NEVER** place the transceiver where normal navigation of the aircraft may be hindered or where it could cause bodily injury.

**NEVER** bend the cables sharply or place the cables too near the aircraft control cables.

**DO NOT** place the transceiver where hot or cold air blows directly on it.

**AVOID** placing the transceiver in areas with temperatures below -20°C or above +55°C (-4°F to +131°F).

### ◇ Battery connection

**NEVER** connect the transceiver to a power source using reverse polarity. Reverse polarity will damage the transceiver.

To prevent voltage drops, solder or crimp the cable lug when connecting the DC power cable to the power supply.

### ◇ Antenna

**NEVER** install an antenna near any aircraft projection, engine or propeller.

Use a 50 Ω, vertically-polarized, VHF air band antenna.

VSWR should be less than 2.5:1.

Mount the antenna on a flat metal surface or install a ground plane of at least 120 cm<sup>2</sup> (18 in<sup>2</sup>).

### ◇ Intercom

The intercom function is enabled by wiring and installing a yoke-mounted communications/intercom switch.

This function facilitates swift contact between the pilot and co-pilot. 2-pairs of headphones and microphones are required for pilot and co-pilot.

### ◇ Interlock

When 2 transceivers are installed into your aircraft, use the interlock function to prevent simultaneous transmission. See "Transmit/receive interlock connections" in **6 CABLE CONNECTIONS** for details.


However, when 2 transceivers are installed via a dual audio panel, the connections are not necessary.

The interlock function can be set in the MENU mode. See the instruction manual for details.

### ◇ COMM1 and COMM2 stickers

When 2 transceivers are installed, to distinguish them from one another, attach the supplied COMM1 and COMM2 stickers.

COMM1 or COMM2 sticker




## 5 USING THE MB-113


When installing the IC-A210/IC-A210E into your aircraft, etc., with another connection system using D-sub 15-pin connector, use the supplied MB-113 as described below.

### ◇ Attachment

- ① Unscrew the 10 bottom screws, then remove the bottom cover from the transceiver.
- ② Unscrew the 5 rear plate screws.
- ③ Disconnect the I/O cable connectors and coaxial, J3, J4 and J6, then remove the rear plate from the transceiver.

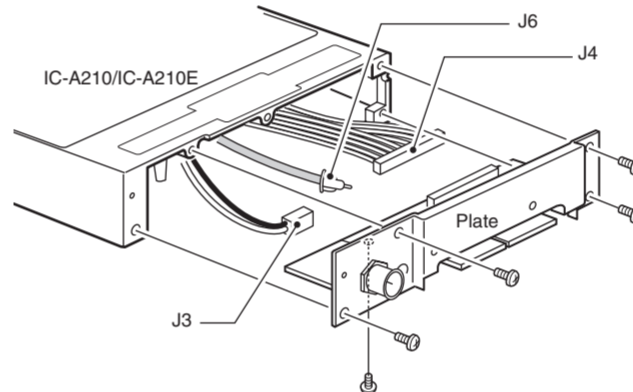

- ④ Connect the I/O cable connectors and coaxial onto the MB-113 as illustrated below.

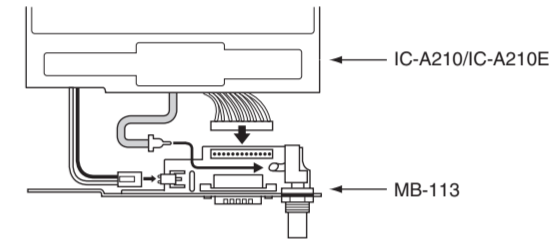

- ⑤ Attach the MB-113 to the transceiver with the 5 rear plate screws.
- ⑥ Replace the removed bottom cover and 10 screws.


**About MB-113:**  
Not supplied with some transceiver's versions.

## 6 CABLE CONNECTIONS


### ◇ Power cable wiring

Use 2 pairs of #18 AWG wires for power and power ground connections.

#### For Card edge connector (Front view)

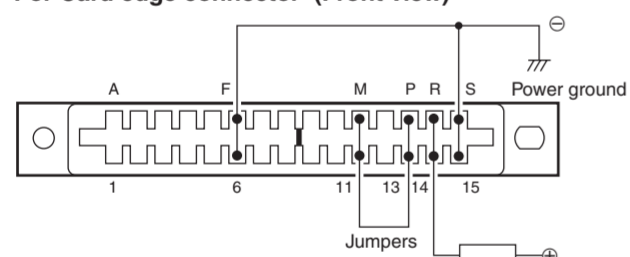

#### For D-sub 15-pin (Front view)

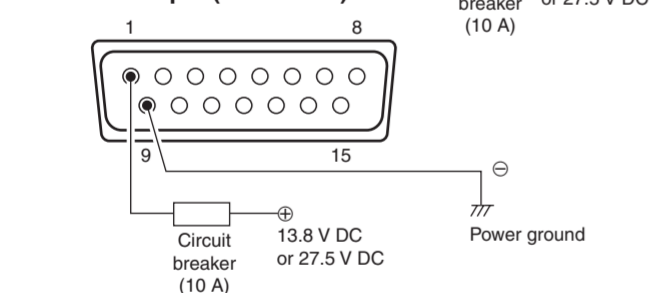

#### • Circuit breaker

To prevent physical damage, a 10 A circuit breaker **MUST** be installed in the DC power line in the aircraft. Install the circuit breaker in the aircraft breaker panel or instrument panel to ensure easy access during flight.

#### • Ground

Connect the transceiver power ground to the airframe ground.


#### • Jumpers

Pins 11, M, P and 13 **MUST** be jumped together with AWG #20 wires or thicker.

### ◇ Yoke-mounted channel and frequency exchange switches

**NOTE:** Channel and frequency selections are available with the Card edge connector only.

For the yoke-mounted channel switch and frequency exchange switch, use a 2-position spring loaded rocker switch or 2 separate momentary push switches.

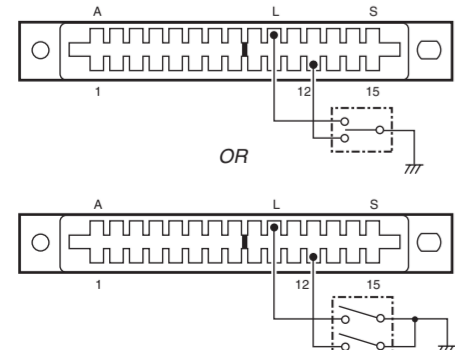

### ◇ Transmit/receive interlock connections


When 2 transceivers are installed, connect pin N to another transceiver's pin 9 each other to prevent the simultaneous transmission for both transceivers.

However, when 2 transceivers are installed via a dual audio panel, the connections are not necessary.


### ◇ Audio line connections

Use #24 AWG wires for connections.


#### For Card edge connector (Front view)

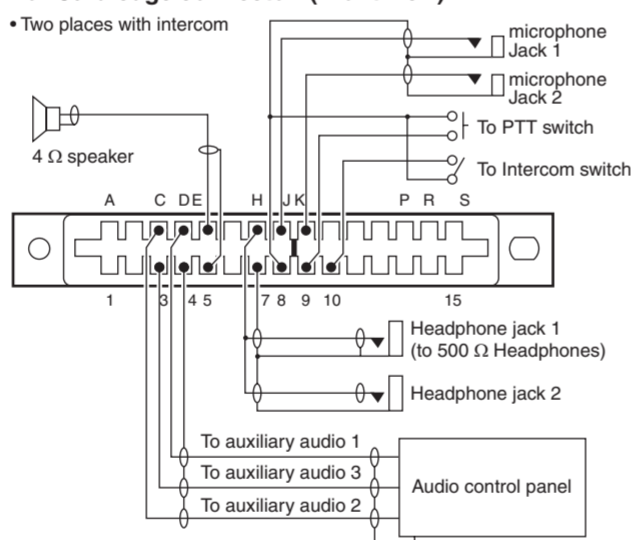


#### • One place

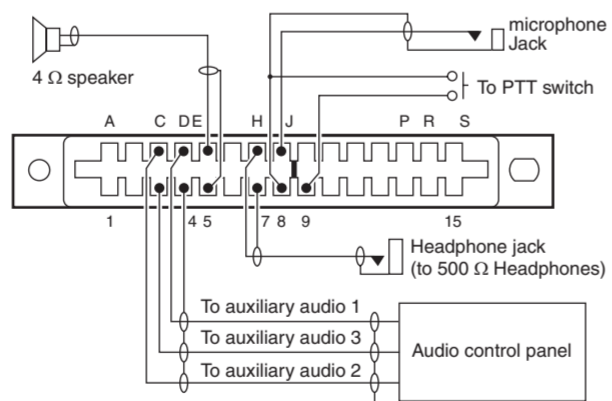

#### For D-sub 15-pin (Front view)

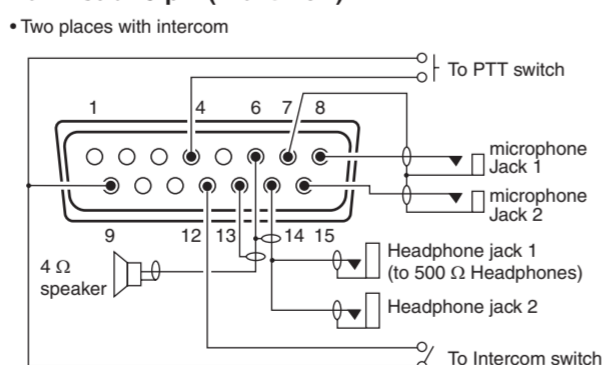


#### • One place

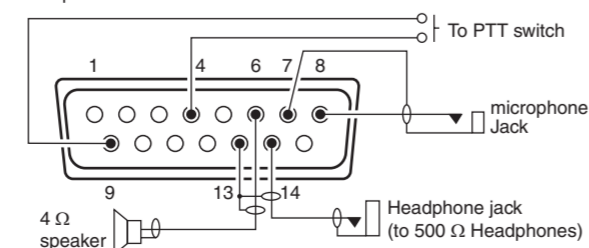

Either an intercom or a yoke-mounted channel/frequency exchange switch can be installed. Both switches cannot be installed at the same time.

## 7 CONNECTOR INFORMATION


### ◇ Card edge connector

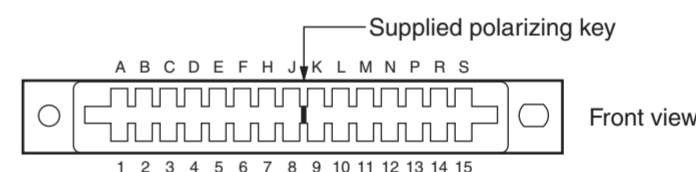

| Pin | I/O | Description                      | Pin | I/O | Description                    |
|-----|-----|----------------------------------|-----|-----|--------------------------------|
| A   | -   | No connection                    | 1   | Out | RS-232 Serial data ⊕ (TXD)     |
| B   | -   | No connection                    | 2   | In  | RS-232 Serial data ⊕ (RXD)     |
| C   | In  | Auxiliary audio 2 ⊕              | 3   | In  | Auxiliary audio 3 ⊕            |
| D   | In  | Auxiliary audio 1 ⊕              | 4   | In  | Auxiliary audio 1, 2, 3 ⊖      |
| E   | Out | External speaker ⊕ (4 Ω/5 W)     | 5   | In  | External speaker ⊖             |
| F   | In  | Aircraft power ⊕                 | 6   | In  | Aircraft power ⊖               |
| H   | Out | Headphones audio ⊕ (500 Ω/60 mW) | 7   | Out | Headphones audio ⊖             |
| J   | In  | Microphone 1 ⊕ (600 Ω)           | 8   | In  | Mic., Intercom mic. and PTT ⊖  |
| K   | In  | Microphone 2 ⊕ (600 Ω)           | 9   | In  | PTT ⊕*                         |
| L   | In  | Memory channel switch*           | 10  | In  | Intercom switch*               |
| M   | In  | +13.8 V power ⊕                  | 11  | In  | +13.8 V power ⊕                |
| N   | -   | Transmit/receive interlock       | 12  | In  | Frequency exchange switch*     |
| P   | -   | No connection                    | 13  | -   | No connection                  |
| R   | In  | Aircraft power ⊕ (13.8/27.5 V)   | 14  | In  | Aircraft power ⊕ (13.8/27.5 V) |
| S   | In  | Aircraft power ⊖                 | 15  | In  | Aircraft power ⊖               |

\*Ground to activate.

### ◇ D-sub 15-pin

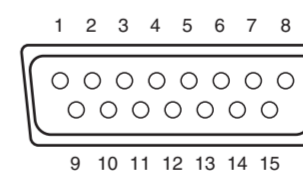

| Pin | I/O | Description                    | Pin | I/O | Description                       |
|-----|-----|--------------------------------|-----|-----|-----------------------------------|
| 1   | In  | Aircraft power ⊕ (13.8/27.5 V) | 9   | In  | Aircraft power ⊖                  |
| 2   | -   | No connection (reserved)       | 10  | In  | RS-232 Serial data ⊕ (RXD)        |
| 3   | Out | RS-232 Serial data ⊕ (TXD)     | 11  | I/O | RS-232 Serial data ⊖              |
| 4   | In  | PTT ⊕*                         | 12  | In  | Intercom select switch*           |
| 5   | In  | Auxiliary audio ⊕              | 13  | Out | External speaker and headphones ⊖ |
| 6   | Out | External speaker ⊕ (4 Ω/5 W)   | 14  | Out | Headphones audio ⊕ (500 Ω/60 mW)  |
| 7   | In  | Microphone ⊕ (600 Ω)           | 15  | In  | Microphone 2 ⊕ (600 Ω)            |
| 8   | In  | Microphone 1 ⊕ (600 Ω)         |     |     |                                   |

\*Ground to activate.

## 8 CARD EDGE CONNECTOR ASSEMBLY

The IC-A210/IC-A210E mates with a Card edge connector in the rack mount. Assemble the Card edge connector as follows.

### Card edge connector assembly

- Strip 4 mm (0.16") from each wire for the card edge connector.
- Tin the leads of the wires.
- Pass the wires through a short length of 13 mm (0.5") heat shrink tubing.
- Solder the leads to the contact terminals.
- Cover the soldered terminals with the heat shrink tubing and heat until they are fixed in place.
- Cover the unused terminals with the heat shrink tubing 10 mm (0.4"), then heat them to prevent shorting.

### Polarizing key

Before installing the Connector into the mounting bracket, check the polarizing key position between contacts 8 and 9. Refer to Connector front view in 7 CONNECTOR INFORMATION.

## 9 OPERATION CHECK

Check the following points after transceiver installation.


- Polarity of the power supply.
- **NO** interference caused to other equipment.
- **NO** noise or interference from other equipment.
- VSWR is less than 2.5:1.
- Communication capability on both the highest and lowest communication frequencies, if possible.

## INFORMATION FOR GPS RECEIVER CONNECTION

Connect the GPS receiver's input/output terminals as below table.

| GPS receiver's terminal | Connector | D-sub connector |
|-------------------------|-----------|-----------------|
| Input terminal          | pin 1     | pin 3           |
| Output terminal         | pin 2     | pin 10          |

## 10 MOUNTING BRACKET ASSEMBLY

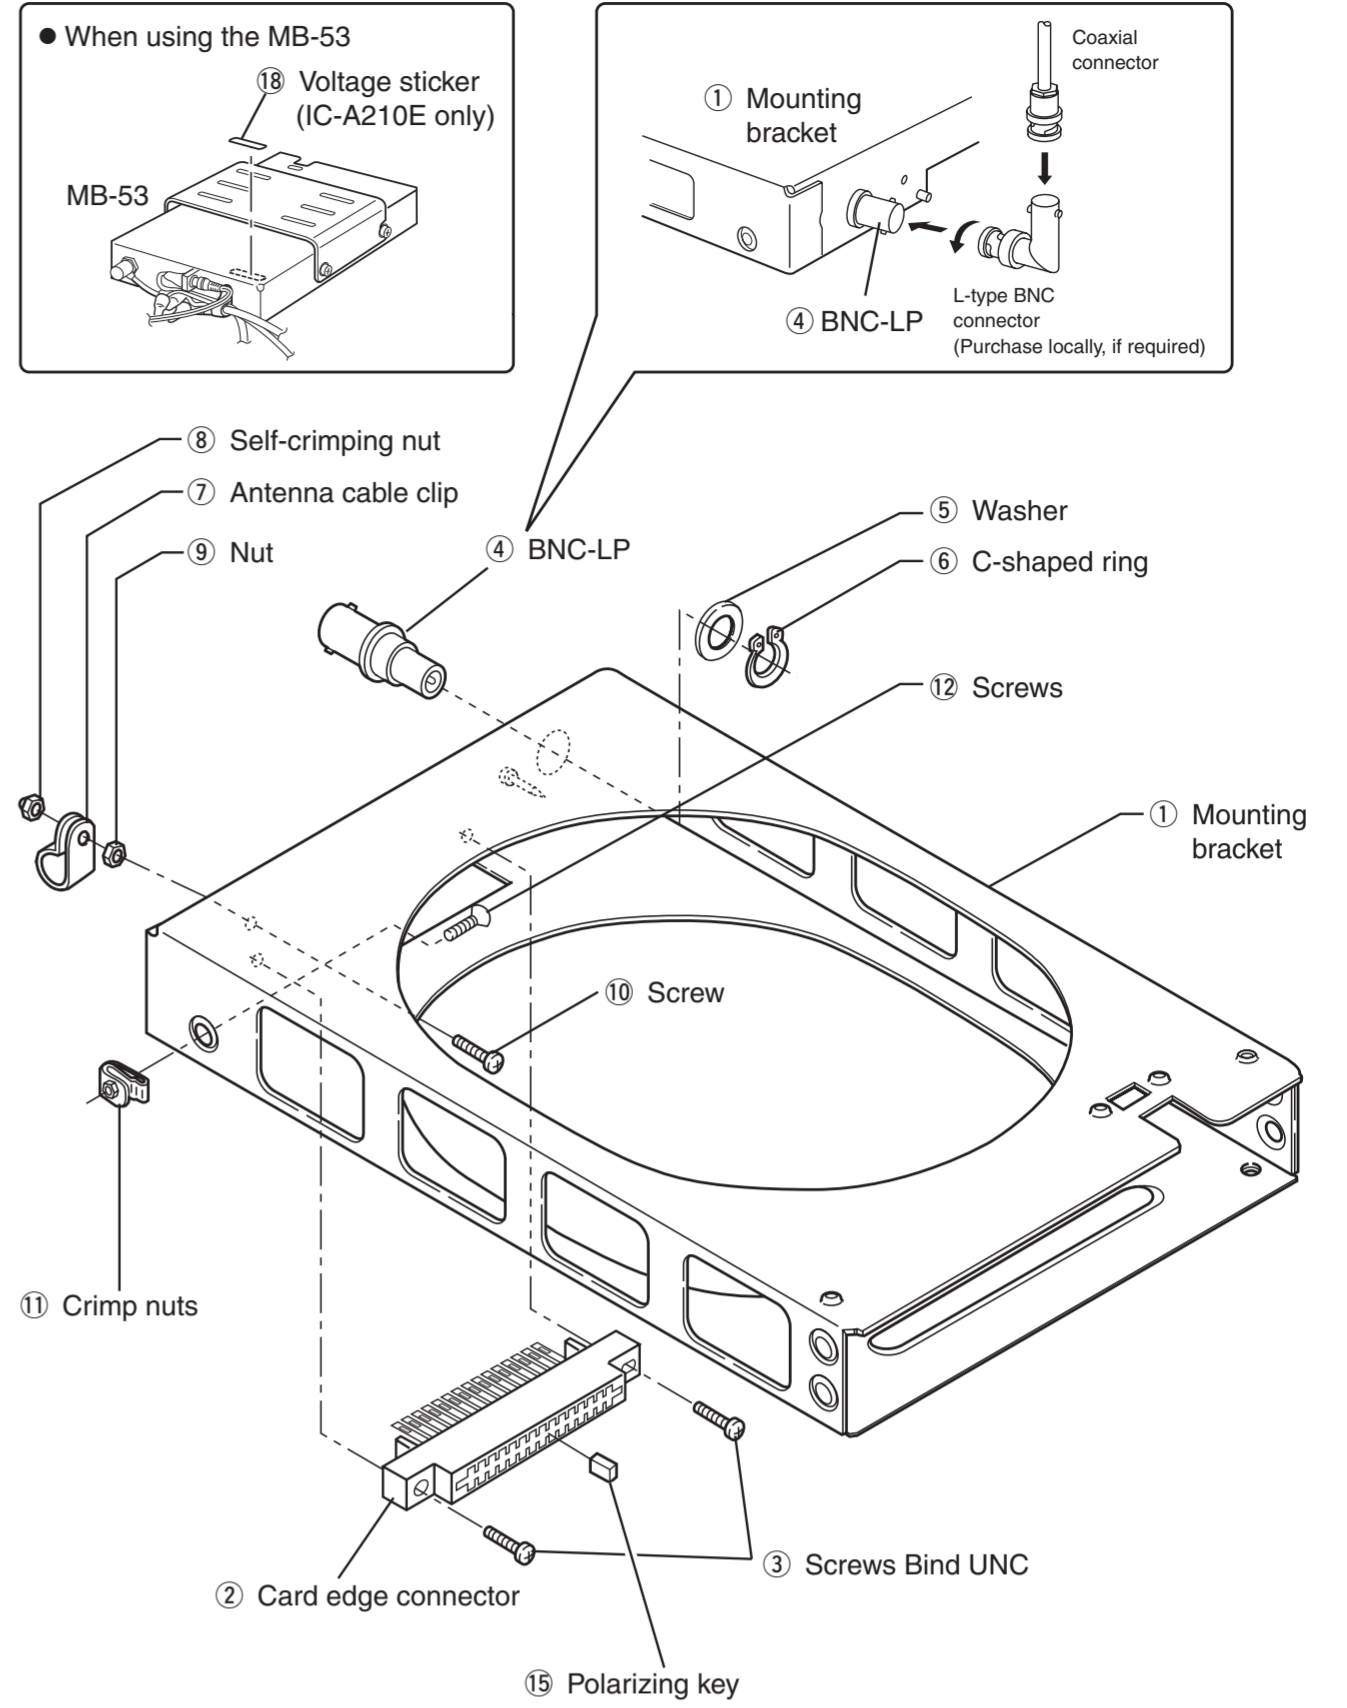

## 11 MARKING MOUNTING HOLES

### Notes for making the mounting hole

The IC-A210/IC-A210E can be mounted securely in the supplied mounting bracket.

Remember to allow adequate space for installation of cables and connectors.


When installing 2 or more transceivers in a stack, the mounting trays should be 1.3 mm (0.05") apart.

The mounting bracket has 0.6 mm (0.024") dimples in the top, bottom, and both sides for proper spacing.


Mark and cut the mounting holes.

To support the mounting bracket, the rear mounting bosses should be attached to the airframe.

### Mounting bracket dimensions

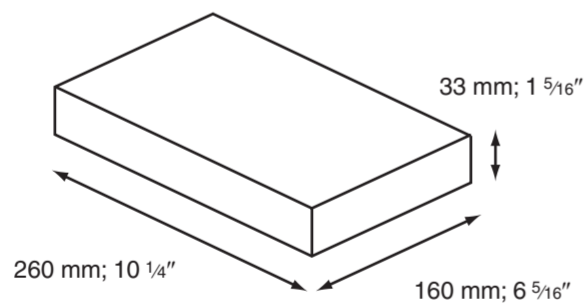


### Front panel dimensions

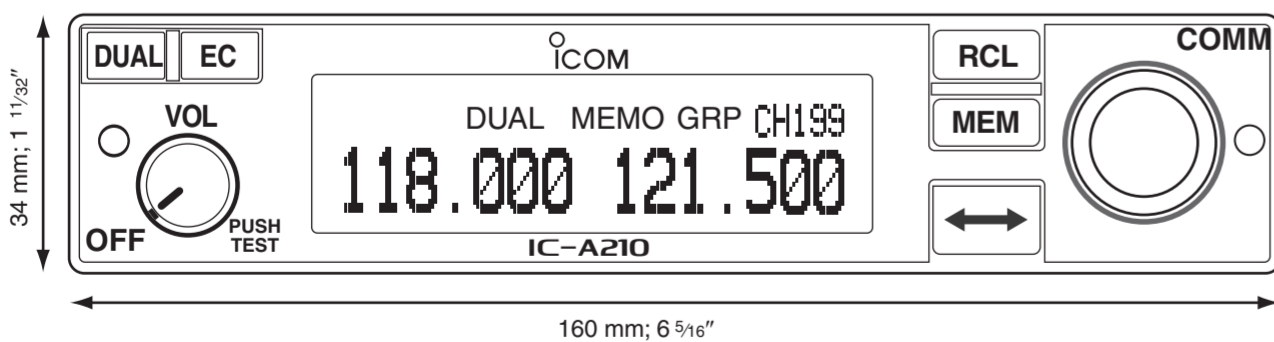

Allow space for the front panel as shown above (illustration: IC-A210).

### Template

Cut out dimensions for the mounting bracket as follows.

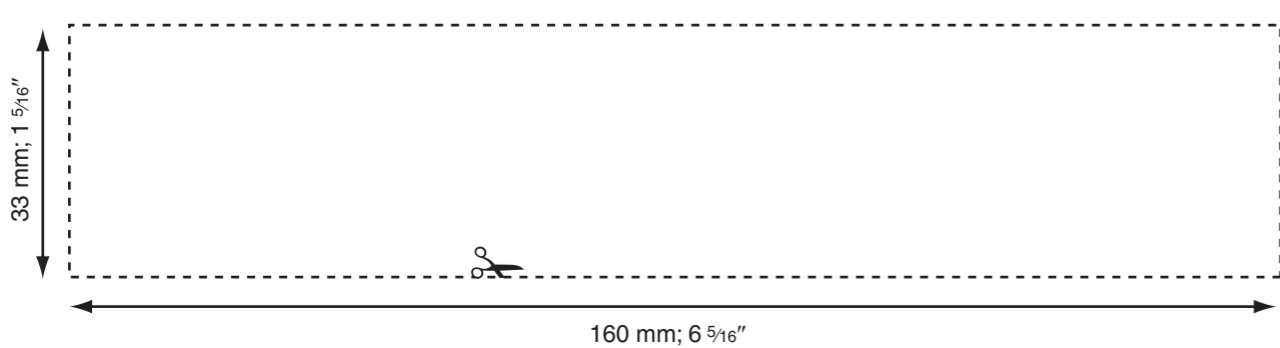

## 12 MOUNTING TO THE BRACKET

### Transceiver installation


- Remove the front panel from the main unit, using a 3/32" allen wrench, then carefully disconnect the flat cable from the front panel. (Fig. 1)

**CAUTION:** Treat the flat cable with care when disconnecting it to avoid possible damage. Improper care disconnecting the cable can cause damage and result in severe non-warranty repair.

- Insert a 3/32" allen wrench into the hole of the main unit and unscrew the inside lock screw until the in-side metal catch touches the chassis hole. (Fig. 2)
  - Use the metal catch located on bottom side of the transceiver when installing into the existing mounting bracket with MB-113.

#### Main unit front view

Use when installing with the original mounting bracket.



- Rotate the lock screw clockwise 4 revolutions (Fig. 3), and then rotate counterclockwise a quarter revolution. (Fig. 4)
- Insert the main unit (transceiver) into the mounting bracket. (Fig. 5)

- Screw the lock screw to fix the main unit (transceiver) to the bracket. (Fig. 6)
- Connect the flat cable. (Fig. 7)


**CAUTION:** Make sure that the flat cable between the transceiver and front panel is securely connected. The transceiver may not function properly when loose or when a wrong connection is made. Improper care installing the cable can cause damage and result in severe non-warranty repair.

- Attach the front panel and re-screw the allen bolts (Fig. 7).

### Transceiver removal

The IC-A210/IC-A210E is easily removed from the mounting bracket, if required.

- Remove the front panel from the main unit, using a 3/32" allen wrench, then disconnect the flat cable from the front panel.
- Insert a 3/32" allen wrench into the hole of the main unit and unscrew the inside lock screw.
- Slowly pull the transceiver out from the mounting bracket.
- Connect the flat cable to the front panel.
- Attach the front panel and tighten the allen screws.

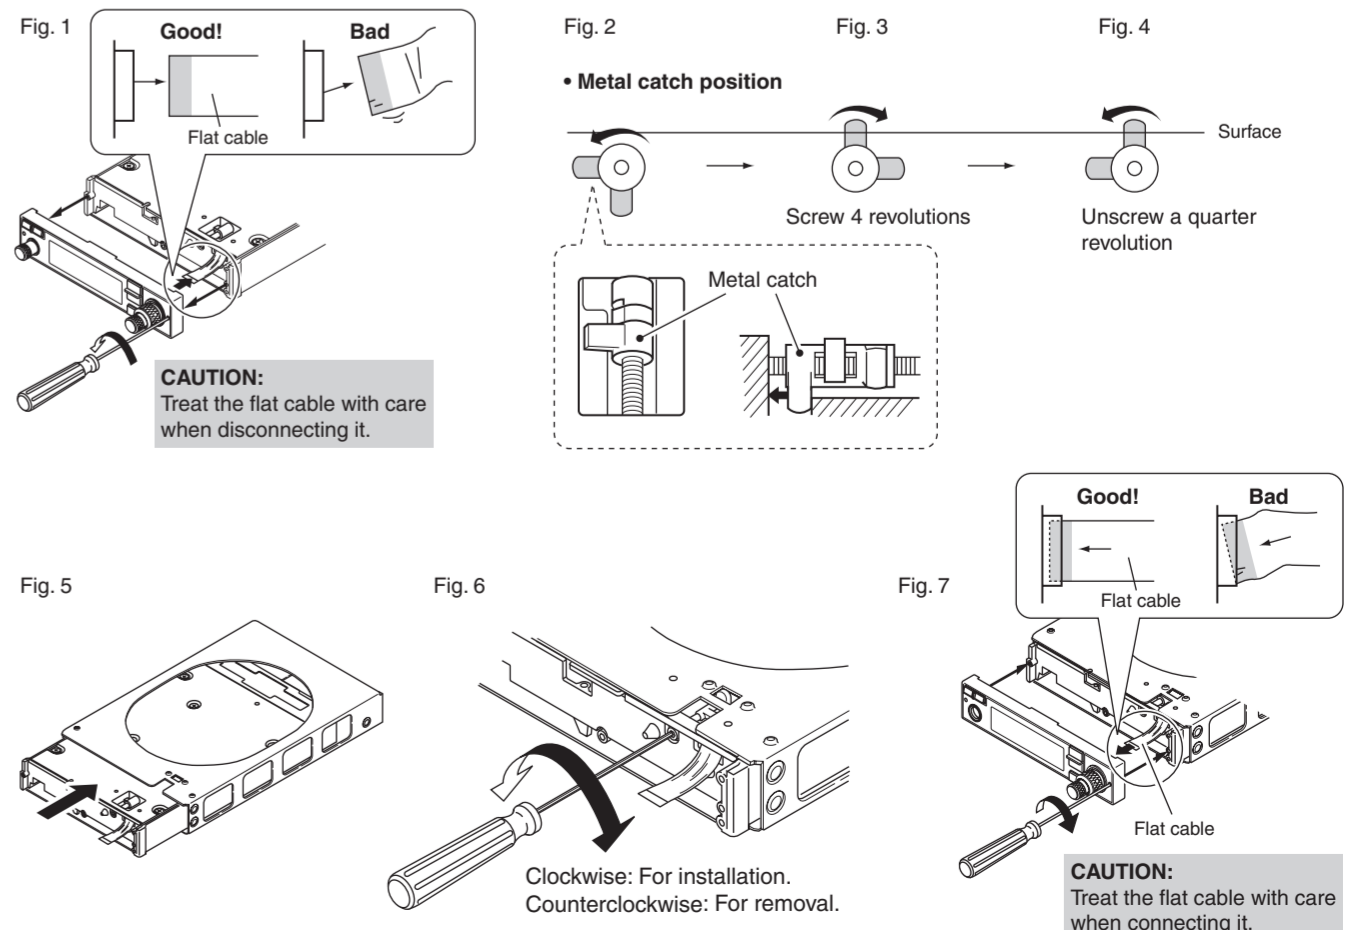

Icom Inc.

1-1-32 Kamiminami, Hirano-ku, Osaka 547-0003, Japan

Printed on recycled paper with soy ink.

Count on us!

A-6602H-2EX-6  
Printed in Japan  
© 2007-2014 Icom Inc.